

Designed and manufactured by Dotworkz



# STXL-CD

Installation Guide

#### IMPORTANT SAFEGUARDS

- Read instructions. At the safety and operating instructions should be read before the unit is approfed.
- (etain instruction). The safety and operating instructions should be ratained for ruture raterance.
- Head Wernings: All warnings on the unit and in the opposition in a realizated stake the pet areal for.
- 4. Fix rev instructions Alterschaftig and user instructions should be left see:
- Jedhaof Connections Only a populees electrations should make electrical connections.
- All achinents. Do no little of admirentshot recommended by the product manuacturer as they may acuse hozards.
- Cable Bury, All public runs must be within permissible. discurse....
- A. Morenting: -This or ill most be parable by one according to entropy according structure and according vas-dring the weight of the on?

#### Accordingly:

- g. The includion should be made by a qualities include;
- the introllation shall be invalide in compliance with the NFC one local regulations.
- Core should be exercised to select suitable narework to install the only letting into coupond wall.
   The core wifeer of the mounting suitable and the weight of the cuit.

calsure to periodically examine the unit until the supporting structure to make sure that the integrity of the installation is most. Given to comply with the raregoing could result in the unit separating from the support structure and to the, with resultant demages or injury to so year example, in ground have the following.

#### UNPACKING

this case one folly. Recater it is comparently can use so mages: if in people by Landle dies of appeal. It an illuminate dies of appeal. It an illuminate powers to between paradigating and many illuminate in property in ils can an analysis illy the suppoer.

#### Be sure to save:

- If each impregate between expectagaing medicial.
   If expect the sefections eightinest is the more full recorporation of the equipment.
- $\lambda_{\rm c}$  . If evertexbacks included Operating task or ions.

#### SERVICE

ll lest ricar vispar se vavide "ancocore, contact. Sery al the "adoving mention

> Dotworkz Technical Support 8am-5pm PST (866) 575-4689

#### SAFETY PRECAUTIONS



#### CAUTION

RISK OF FLECTRIC SHOCK DO NOT OPEN



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER- SERVICEABLE PARTS INSIDE. REFER SERVICING TO OUALITIED SERVICE PERSONNEL.



The ignitiving less with an enowhead symbol, within an equilateral margic, is intended to alarm the usar to the presence of non-insulated heappeasus seriogal is within the product serious and that may conobserve an analysis at the constitute ones to persons

Este an locio a conserva para alche in al teceno di la presencia dell'i cato, e delignaci no-dia acci i centro del cari. Il relata para las l'estas que processo del quando en securidad que

Convente Acres in company account in trade of the Acres presences one of the acres denganeares in presence de company of a chillrenia woodule, qui permetre un disque die school.

Trice several to 1 and 8a. Lander the endormous and a month value of Color of energy, parently promotive to dur. Proceditions to leak to a formier en alle enter Gerbandes and Missel en formier en alle enter Gerbandes.

Dia finació à emandida aloro: a lista à provance. Fai forsa o congosar conserva fide i le costrare e con produto, que pode se un reco de choque siáliros.

Cuerro smitodo Alinharo per os-serire lismente ollo promisero Silfra di Carro soli e sus il forme di la colli in una e alle recinarene del prodetti etro soe escoro compenio di coppo e attinos.



The expandation can by him an equity enalmangle simponded to diorithe wonlepresence or imponent apprairing and maintenance (servicing) industrians in the Effective appearaging the applier be.

Ella esta a la productión a consistencia de la consistencia del consistencia de la consistencia del consistencia del consistenc

Cologratició en recipilidades amentan est atécnicas, el entra llo recibir e le periorida del nationidade aspector es como la ritléta que accompagnon la apartal.

Pásis kar milli - El politici al de a Venera i com Montre d'anse n'els vice il gen Parvuson genime un Llerofund ammerien la edas Cerdi begierre.

Life amod oldo posici do ecolomo; on é pretendido o erfono tatáno o presença de fino tigões in no tantes, or Third I importante ou fino o ori. Third

Cuerty similarly deligration deligation from the improvement of the first of the contract of the first similar in the first of the contract of


# **Contents of Box**









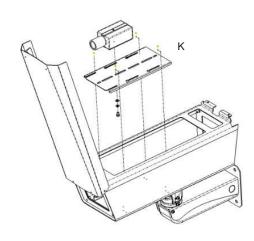


- A. Enclosure/housing
- B. Wall mount arm
- C. Outdoor power supply (Can be mounted inside wall mount arm)
- D. Power supply mounting screws and washers
- E. Camera mounting bolts and washers
- F. Cable management sleeve inside wall mount arm
- G. Rechargeable desiccant humidity removal pack
- H. Allen wrench tool for adjusting knuckle wall mount arm
- I. Wall mount screws and anchors
- J. Threaded locknut
- K. Camera sled pre-installed

#### Tools needed

- 1. Phillips screwdriver
- 2. Socket wrench
- 3. Electronics size flat screwdriver



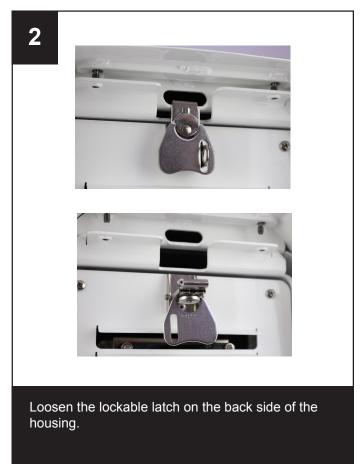











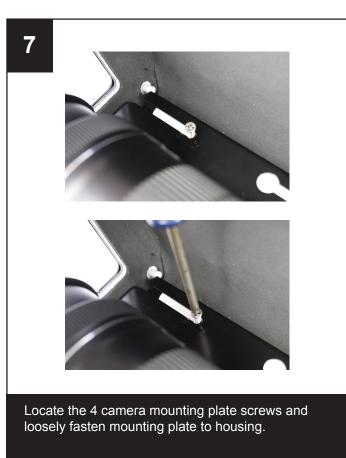

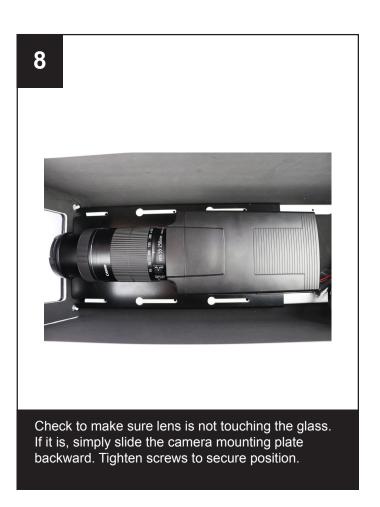







Close the hatch to the housing and secure it with the lockable latch. Flip housing upside down.

# 10






Remove cable gland nut to provide power, network, or other cables needed in the housing.





the cable gland.

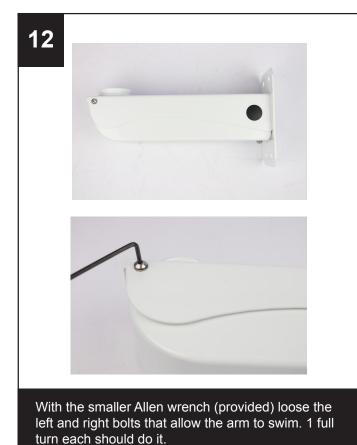






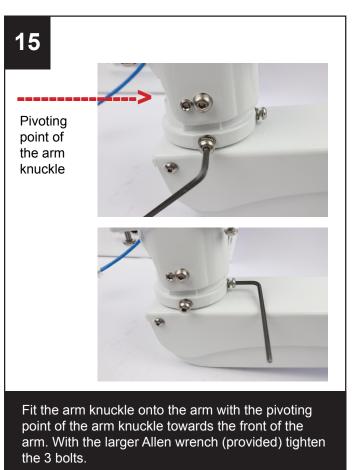

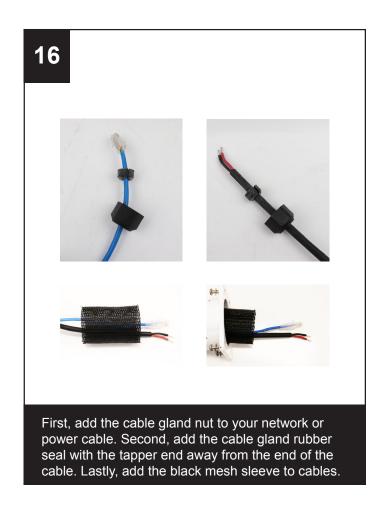


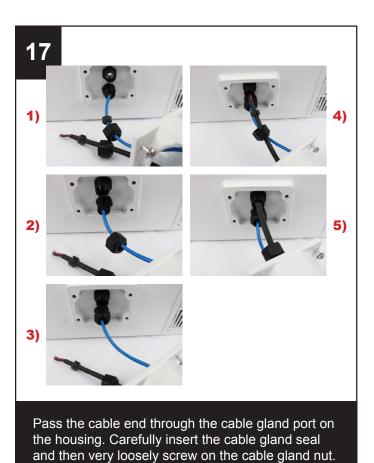







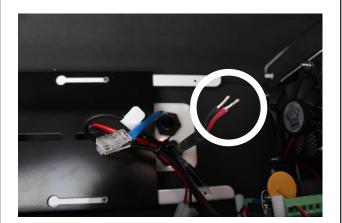

Open the lid to the housing. Locate the power cable from the cable gland port and the 12V power connector.

22










Insert the red cable into the red side of the 12V power connector. Tighten with a small flat screw driver. Repeat for black cable.

23



Connect the network and power cable to the camera.


24

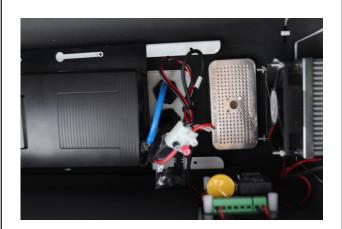

Place the humidity removal pack (included) near the back of the housing on the insulation pad.

\* Reminder: Recharge the desiccant humidity removal pack when needed per package instructions.



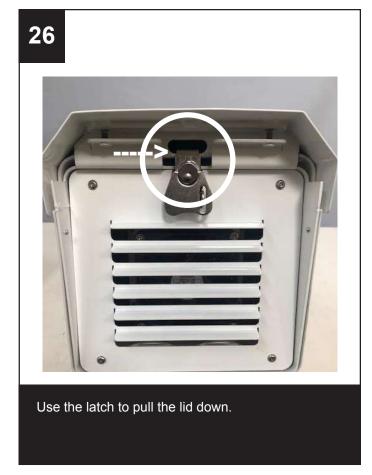







Above is a properly sealed lid.

# **Appendix A: Mounting Power Supply Inside Arm**

1)





Open arm and push cable (the end with the single black and single red cable) through the knuckle arm hole.

2)



Position the power supply in the arm so that the holes for the screws align.

3)





Find 4 Philips head screws and tightening washers (included). Fasten the power supply to the arm.

4)





Push the other end of the power supply cable through the back square hole of the arm so the arm can close without damaging the cables.

5)



Replace the bolt with the larger Allen wrench to complete close the arm.

# LIMITED WARRANTY

# DOTWORKZ, INC. PRODUCTS

DOTWORKZ SYSTEMS INC. Warrants this Product to be free from defects in material or workmanship, as follows:

 PRODUCT CATEGORY
 PARTS
 LABOR

 All Enclosures and Electronics
 One (1) Year
 One (1) Year

 Power Supplies
 One (1) Year
 One (1) Year

 Accessory Brackets
 One (1) Year
 One (1) Year

During the warranty period, to repair the product the purchaser will deliver it to Dotworkz Systems Inc. San Diego, CA or return the defective product, freight prepaid. The product to be repaired is to be returned in either its original carton or a similar package presenting an equal degree of protection with a Return Materials Authorization number displayed on the outer box or packing slip. To obtain RMA # you must contact our Technical Support Team at 866-575-4689. Dotworkz Systems will return the repaired Product, freight paid. Dotworkz Systems is not obligated to provide purchaser with a substitute unit during the warranty period or at any time. After the applicable warranty period, purchaser must pay all labor and/or parts and shipping charges.

The limited warranty stated in these product instructions is subject to all of the following terms and conditions:

- 1. NOTIFICATION OF CLAIMS: WARRANTY SERVICE: If purchaser believes that the product is defective in material or workmanship, then a written notice with an explanation of the claim shall be given promptly by purchaser to Dotworkz Systems but all claims for warranty service must be made within the warranty period. If after investigation Dotworkz Systems determines that the reported problem was not covered by the warranty, purchaser shall pay Dotworkz Systems for the cost of investigating the problem at its then prevailing per incident billable rate. No repair or replacement of any product or part thereof shall extend the warranty period as to the entire product. The specific warranty on the repaired part only shall be in effect for a period of ninety (90) days following the repair or replacement of that part or the remaining period of the product parts warranty, whichever is greater.
- 2. EXCLUSIVE REMEDY: ACCEPTANCE: Purchaser's exclusive remedy and Dotworkz Systems sole obligation is to supply (or pay for) all labor necessary to repair any product found to be defective within the warranty period and to supply, at no extra charge, new or rebuilt replacements for defective parts
- 3. EXCEPTIONS TO LIMITED WARRANTY: Dotworkz Systems shall have no liability or obligation to purchaser with respect to any product requiring service during the warranty period which is subjected to any of the following: abuse, improper use, negligence, accidents, lightning damage or other acts of God (i.e., hurricanes, earthquakes), modification, failure of the end-user to follow the directions outlined in the product instructions, failure of the end-user to follow the maintenance procedures written and recommended in the product instructions and service manual, or recommended by the International Security Industry Organization. Furthermore, Dotworkz Systems shall have no liability where a schedule is specified for regular replacement, maintenance or cleaning of certain parts (based on usage) that the end-user has failed to abide to such schedule; attempted repair by non-qualified personnel; operation of the Product outside of the published environmental and electrical parameters; if such Product's original identification (trademark, serial number) markings have been defaced, altered, or removed. Dotworkz Systems excludes from warranty coverage products sold AS IS and/or WITH ALL FAULTS and excludes used Products which have not been sold by Dotworkz Systems to the Purchaser. All software and accompanying documentation furnished with, or as part of the Product is furnished "AS IS" (i.e., without any warranty of any kind), except where expressly provided otherwise in any documentation or license agreement furnished with the Product.
- 4. PROOF OF PURCHASE: The purchaser's dated bill of sale must be retained as evidence of the date of purchase and to establish warranty eligibility.

DISCLAIMER OF WARRANTY EXCEPT FOR THE FOREGOING WARRANTIES, DOTWORKZ SYSTEMS HEREBY DISCLAIMS AND EXCLUDES ALL OTHER WARRANTIES, EXPRESSED OR IMPLIE D, INCLUDING, BUT NOT LIMITED TO ANY AND/OR ALL IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND/OR ANY WARRANTY WITH REGARD TO ANY CLAIM OF INFRINGEMENT THAT MAY BE PROVIDED IN SECTION 2-312(3) OF THE UNIFORM COMMERCIAL CODE AND/OR IN ANY OTHER COMPARABLE STATE STATUTE. DOTWORKZ SYSTEMS HEREBY DISCLAIMS ANY REPRESENTATIONS OR WARRANTY THAT THE PRODUCT IS COMPATIBLE WITH ANY COMBINATION OF NON-V1DEOLARM PRODUCTS OR NON-DOTWORKZ SYSTEMS RECOMMENDED PRODUCTS THAT THE PURCHASER CHOOSES TO CONNECT TO THE PRODUCT.

LIMITATION OF LIABILITY THE LIABILITY OF DOTWORKZ SYSTEMS, IF ANY, AND PURCHASER'S SOLE AND EXCLUSIVE REMEDY FOR DAMAGES FOR ANY CLAIM OF ANY KIND WH ATSOEVER, REGARDLESS OF THE LEGAL THEORY AND WHETHER ARISING IN TORT DP CONTRACT SHALL NOT BE GREATER THAN THE ACTUAL PURCHASE PRICE OF THE PRODUCT WITH RESPECT TO WHICH SUCH CLAIM IS MADE. IN NO EVENT SHALL DOTWORKZ SYSTEMS BE LIABLE TO PURCHASER FOR ANY SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES OF ANY KIND INCLUDING BUT NOT LIMITED TO COMPENSATION, REIMBURSEMENT OR DAMAGES ON ACCOUNT OF THE LOSS OF PRESENT OR PROSPECTIVE PROFITS. OR FOR ANY OTHER REASON WHATSOEVER.